




# Insulator Testers for High Voltage Live Lines

## Automated Electric Field Assessment Along Energized Insulators

- Instantaneous graphical indication
- Safe, easy to use and lightweight (1.6 Kg)
- No electrical contact with insulators
- Early detection and recording of faults
- Works on energized insulators up to 1,000,000 Volts
- **SAFETY** and maintenance tool
- Used for all Porcelain, Composite and Glass Insulators
- Provides contamination assessment
- Reliable, proven, deployed **WORLDWIDE**

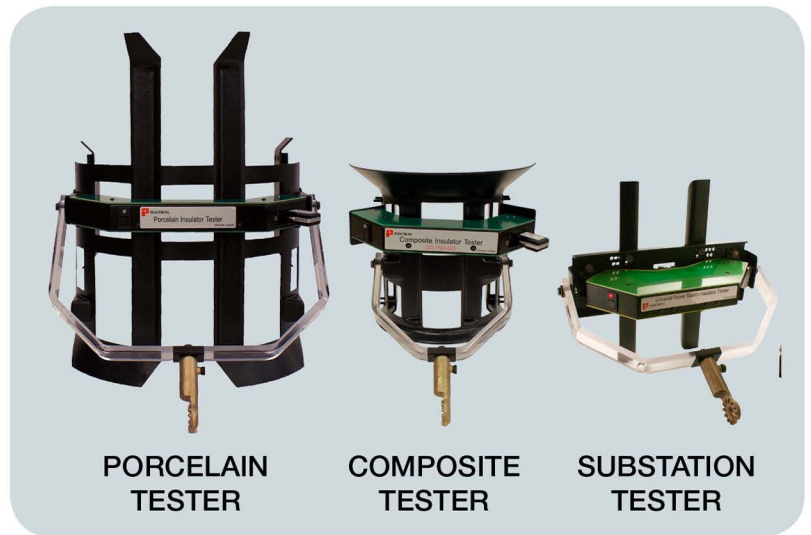

PORCELAIN TESTER

COMPOSITE TESTER

SUBSTATION TESTER

**For More Information Please Contact LineStar Directly**

**BC Office**  
17949 Roan Place  
Surrey, B.C. V3S 5K1  
Phone: 604-594-2701  
Email: sales@linestar.ca

**Alberta Office**  
# 14, 6325 - 11 Street SE  
Calgary, AB, T2H 2L6  
Phone: 403-243-1900  
Email: salesab@linestar.ca

**Prairies Office**  
1103 Keewatin Street  
Winnipeg, MB, R2X 2Z3  
Phone: 204-783-9771  
Email: salesmbsk@linestar.ca

**Ontario Office**  
Unit #1 - 171 Ambassador Dr.  
Mississauga, ON, L5T 2J1  
Phone: 905-564-5344  
Email: saleson@linestar.ca

**Québec Office**  
1331 Rue Natuinale  
Terrebonne, QC, J6W 6H8  
Phone: 438-239-9993  
Email: ventesqc@linestar.ca

**Atlantic Canada Office**  
714 Malenfant Blvd  
Dieppe, NB, E1A 5V8  
Phone: 506-533-0476  
Email: karl@linestar.ca

## Fast & Simple to Use

Simply slide the tester sled along the insulator (string). It instantly provides an audible and visual alarm if a dangerous condition exists and it automatically records all insulator defects.



### Porcelain Tester

The Porcelain Tester is used for Porcelain and Glass insulators. It has a feature that will provide Instant Status Reporting for DANGER conditions.




### Composite Tester

The Composite Tester is used for Composite insulators. It has a GO/NO-GO feature to instantly report DANGER.



### Substation Tester

The Substation Insulator Tester is used for Porcelain and Composite insulators. It can be used on energized lines from 15 kV to 1000 kV and is ideal for substation environments (station posts, solid posts, bushings, lightning arrestors, etc.)

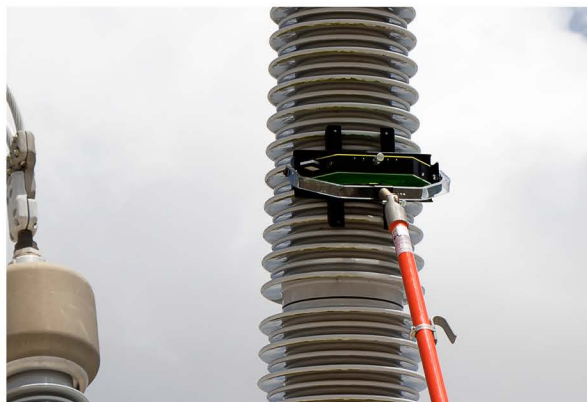

#### BC Office

17949 Roan Place  
Surrey, B.C. V3S 5K1  
Phone: 604-594-2701  
Email: sales@linestar.ca

#### Alberta Office

# 14, 6325 - 11 Street SE  
Calgary, AB, T2H 2L6  
Phone: 403-243-1900  
Email: salesab@linestar.ca

#### Prairies Office

1103 Keewatin Street  
Winnipeg, MB, R2X 2Z3  
Phone: 204-783-9771  
Email: salesmbsk@linestar.ca

#### Ontario Office

Unit #1 - 171 Ambassador Dr.  
Mississauga, ON, L5T 2J1  
Phone: 905-564-5344  
Email: saleson@linestar.ca

#### Québec Office

1331 Rue Natuinale  
Terrebonne, QC, J6W 6H8  
Phone: 438-239-9993  
Email: ventesqc@linestar.ca

#### Atlantic Canada Office

714 Malenfant Blvd  
Dieppe, NB, E1A 5V8  
Phone: 506-533-0476  
Email: karl@linestar.ca